# **Sundance® Spas 880 Capri®**

## Specifications

	•
Dimensions:	69" x 82" x 30.5" (175.5 cm x 208.5 cm x 77.5 cm)
Seating Capacity:	2-3 Adults
Dry Weight:	660 lbs (299 kg)
Filled Weight (Average Fill):	2,662 lbs (1,207 kg)
Water Capacity (Average Fill):	240 US Gal (908 Liters)
Controls:	880 Touchscreen Control, Displays Temperature, Time, Cycles
	and Jet/Air System Control. Offers Customizing of Filtration
	Cycles, Lighting, Water Temperature Setting and other
	features
Water Delivery:	1 TheraMax High-Flow Pump and 8-Hour Dynamic Flow
	Circulation System
Pump 1:	North America (60 Hz): 1-Speed/2.5 HP Continuous, 11.3A
	Max., 56 Frame
	Export (50 Hz): 1-Speed/2.0 HP Continuous, 7.0A Max.
Pump 2:	High Output Dynamic Flow, 24-Hour programmable, factory default set to 8-Hour Filter/
	Circulation Pump (35 gp m), Programmable for Daily Start Time and Duration
Total Hydrojets:	
	12 Fluidix ST, 2 Fluidix Nex, 4 Focus-Relief, 4 Accu-Pressure
	6 Fluidix Reflex, 2 Fluidix Nex, 4 Focus-Relief, 2 Vortex
Air Blower:	
	4 Air Injector Jets with Quiet High Speed Air Pump
	2/1 (Standard air control with LED lights and massage selector with LED lights)
	MicroClean® Ultra II Filtration System, 130 ft² (2 interlocking cartridge filters)
Water Treatment:	Dynamic Flow Circulation System; Factory installed ClearRay Active Oxygen® System
	Export: ClearRay Active Oxygen® System
Lighting:	Multi-Colored LED Lighting System (1 Waterfall, 1 Underwater, 2 Air controls,
	1 Massage Selectors); Exterior lighting (white only)
	Windy Oak, Ironwood and Flint Gray
	Platinum, Celestite, Monaco, Midnight, Travertine
Handrails:	<del>-</del>
ComforTone Headrests:	·
Heater:	North America (60 Hz): Hi Flow 5.5 kW with Titanium Element
	Export (50 Hz): Hi Flow 2.7 kW with Titanium Element
Electrical Requirements:	North America (60 Hz): 240 VAC@40A or 50A;
	Export (50 Hz): 230-240 VAC@1x16A, 2x16A (see manual for more configurations);
	or Suitably Rated Circuit Breaker to Comply with Local Electrical Regulations.
	Certain Countries May Require Dual Power Inputs; Two GFCI/RCD Breakers are
	Required for This Configuration.
Limited Warranty*:	North America (60 Hz): 10 Years Shell, 7 Years Shell Surface, 5 Years Plumbing
	Component Leaks, 5 Years Equipment and Controls, 5 Years Cabinet, 5 Years Jets,
	2 Years Lights, 1 Year Stereo
	Export (50 Hz): 10 Years Shell, 7 Years Shell Surface, 5 Years Plumbing
	Component Leaks, 5 Years Equipment and Controls, 5 Years Cabinet, 5 Years
	Jets, 2 Years Lights, 2 Years Stereo
	Adjustable Flow Rate; Colored Lighting
Audio System (Optional):	Factory Installed BLUEWAVE® 2.0 Wireless Spa Stereo System with Auxiliary 3.5
	mm headphone jack connection, Bluetooth® compatible, 2 premium speakers and a
Special Features:	powered subwoofer  Ontional (Factory Installed) SmartTub® Module, Ontional Industive Charger, Ontional
Special realules	<i>Optional</i> (Factory Installed) SmartTub® Module, <i>Optional</i> Inductive Charger, <i>Optional</i> Spa Sense™ System
	opa ochac oyaldii

## **Sundance Spas 880 Capri**

### **Operation/Seat Depths**



- (A) Sunscent Dispenser
- B Air Control Activates Seat A Jets (12 Fluidix-ST, 2 Fluidix Nex, 4 Accu-Pressure)
- Massage Selector Adjusts
  Massage Level Between Seat A
  Jets and Seat B Jets
- D Air Control Activates Seat B Jets (6 Fluidix Reflex, 2 Fluidix Nex, 2 Vortex)
- (E) Waterfall Selector [8-Hour Circ. Pump] Controls Waterfall Output
- Focus-Relief Jets: Work with both the blower and Jets Pump 1. The blower introduces air to the jet and the Jets Pump forces water through.

#### 36 Total Jets



Accu-Pressure Jets (4)



Focus-Relief Jets (8)





Fluidix-ST Jets (12)



Fluidix Reflex Jets (6)



Spa Operation Subject To Change Without Notice

### **SEAT DEPTHS**

A = 24.00" (60.96 cm)

B = 24.50" (62.23 cm)


C = 12.00" (30.48 cm)


Listed dimensions represent distance from top of acrylic to lowest point in seat. Tolerance ± 0.5" (1.27 cm).



## **Sundance Spas 880 Capri**

### **Portable Dimensions**

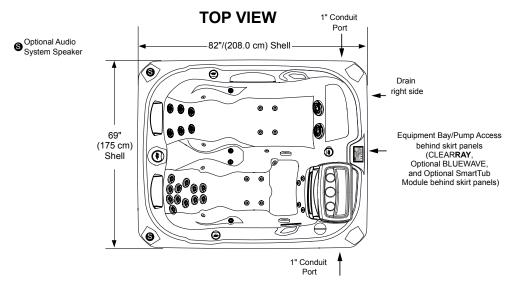


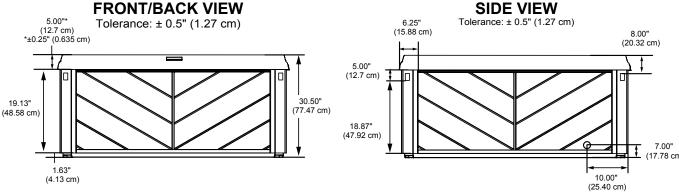



IMPORTANT! Always measure each hot tub for exact dimensions BEFORE designing its foundational support and/or decking.



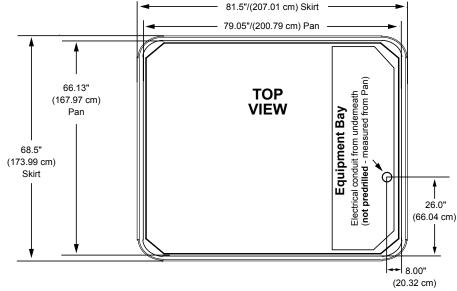

**NOTE:** Over time the panel(s) may bow, this is considered normal. The panels will straighten out when reinstalled into the mounting channel. Place one end of the panel into the channel first then flatten the panel and insert the other end.

Dimensions/specifications subject to change without notice. Tolerance: ± 0.5" (1.27 cm)

Dimensions/Specifications Subject To Change Without Notice